 


Annual Service Kit Assembly Instructions

Box contents

1. Lid
2. Air Relief Valve
3. Valve Adapter
4. Washer
5. Nut
6. Gaskets x 4
7. 'O' Rings x 2
8. Lid Cable

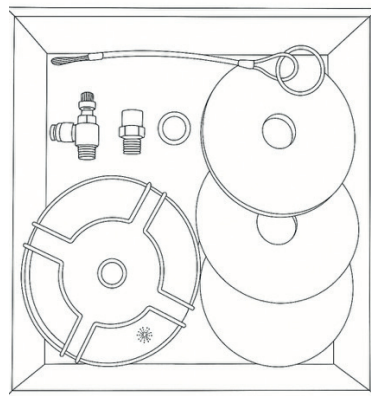

Instructions

1. Pass threaded end of Valve Adapter through Lid



2. Place Washer over Valve Adapter Thread




3. Place Nut on the end of Valve Adapter thread and tighten with a Spanner (spanner not included)




...PTO

4. Place Cable end of Lid Cable over the top of the Valve

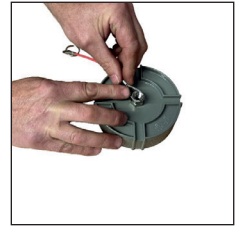

5. Attach Air Control Valve to the top of the Valve Adapter and tighten with a Spanner (spanner not included)

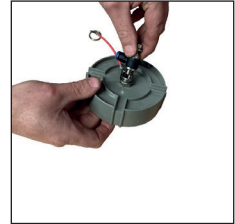

6. Peel paper off the back of the Lid Gasket and stick inside the Lid taking care to place the Gasket centrally



7. Attach Split ring end of Lid Cable to the loop on the Air Supply Trigger



8. Remove old 'O' Rings



9. Install new 'O' Rings



www.pnupoint.com
sales@pnupoint.com
Visit us on youtube